

## Стандартные ряды (ряды E по ГОСТ 28884-90)

E6	E12	E24	E192	E6	E12	E24	E192	E6	E12	E24	E192					
100	100	100	100	220	220	220	215	470	470	470	464					
			101				218				470					
			102				221				475					
			104				223				481					
			105				226				487					
			106				229				493					
			107				232				499					
			109				234				505					
			110				237				511					
		110	111			240	517									
			113			243	523									
			114			246	530									
			115			249	536									
			117			252	542									
			118			255	549									
			120			258	556									
			121			261	562									
			123			264	569									
	120	124	267			576										
		126	271			583										
		127	274			590										
		129	277			597										
		130	280			604										
		132	284			612										
		133	287			619										
		135	291			626										
		137	294			634										
	130	138	298			642										
		140	301			649										
		142	305			657										
		143	309			665										
		145	312			673										
		147	316			681										
		149	320			690										
		150	324			698										
		152	328			706										
	150	150	150			154	330			330	330	332	680	680	680	715
						156						336				723
						158						340				732
			160			160					344	741				
						162					348	750				
						164					352	759				
						165					357	768				
						167					361	777				
						169					365	787				
		172				370					796					
		174				374					806					
		176				379					816					
180		180	180	178	390	390		390	383		820	820			820	825
				180					388							835
				182					392							845
				184					397							856
				187					402							866
				189					407							876
	191			412			887									
	193			417			898									
	196			422			909									
200	200	200	198	430	430	430	427	910	910	910	920					
			200				432				931					
			203				437				942					
			205				442				953					
			208				448				965					
			210				453				976					
213	459	988														